


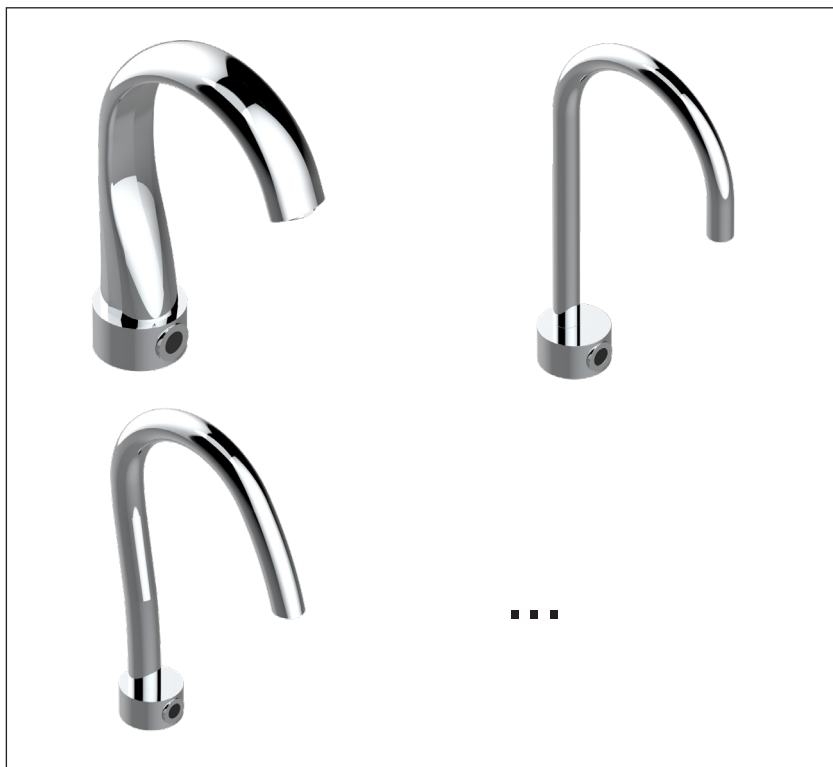

FR Robinet lave-mains électronique à infrarouge, sans vidage
alimentation par pile (170IRB) et alimentation par secteur
(170IRS)

EN Electronic tap for washbasin with infra-red presence
detection, without pop-up waste, battery powered (170IRB) and
mains powered (170IRS)

Outillage (Non-fourni)
Tools (Not provided)






170IRS

L'installation doit être conforme à la norme
NFC 15-100 (voir page 2)




Installation must comply with NFC 15-100
(see page 2)

mm / inch

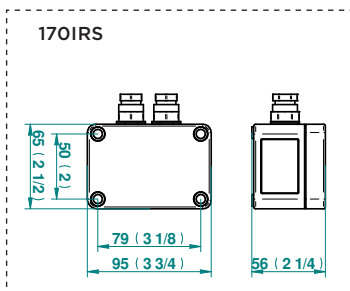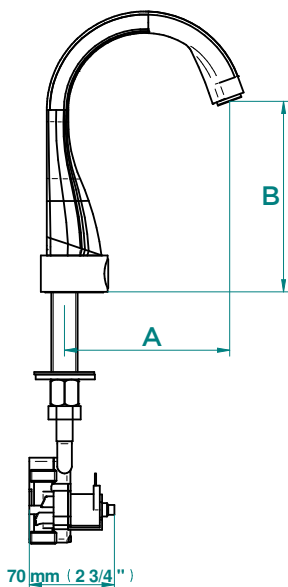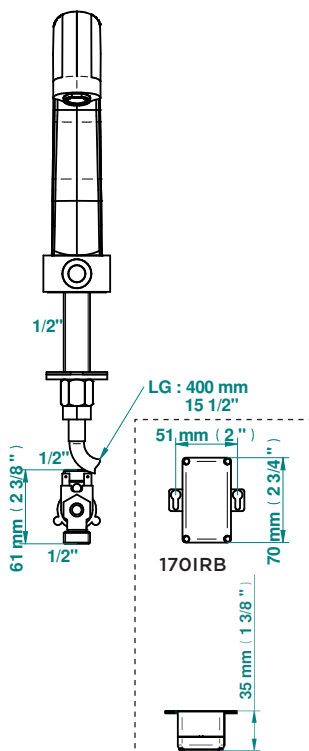


ø de perçage conseillé
recommended drilling ø
empfohlener Abstand
Ø de perforación aconsejado

Ø 30 mm (1 1/8 ")




	mm		inch	
	A	B	A	B
A2N	136	157	5 3/8	6 1/8
A7A				
A33				
A34	147	110	5 3/4	4 3/8
A35				
G1T	153	95	6	3 3/4
G29	151	127	6	5
G5E	179	275	7	10 7/8
G6A	180	220	7 1/8	8 5/8
G7A	200	85	7 7/8	3 3/8
G7C				
G7E	150	120	5 7/8	4 3/4
G4P				
G7R	160	188	6 1/4	7 3/8
...				
G7W				
G8A	160	178	6 1/4	2 1/8
G9A				
G9C				
G9E	140	102	5 1/2	4
G9G				
G9J				
U2A	217	129	8 1/2	5 1/8
U2B				
U6A	173	190	6 3/4	7 1/2
U93	136	77	6 3/8	3
U9A	150	107	5 7/8	4 1/4
U9K				

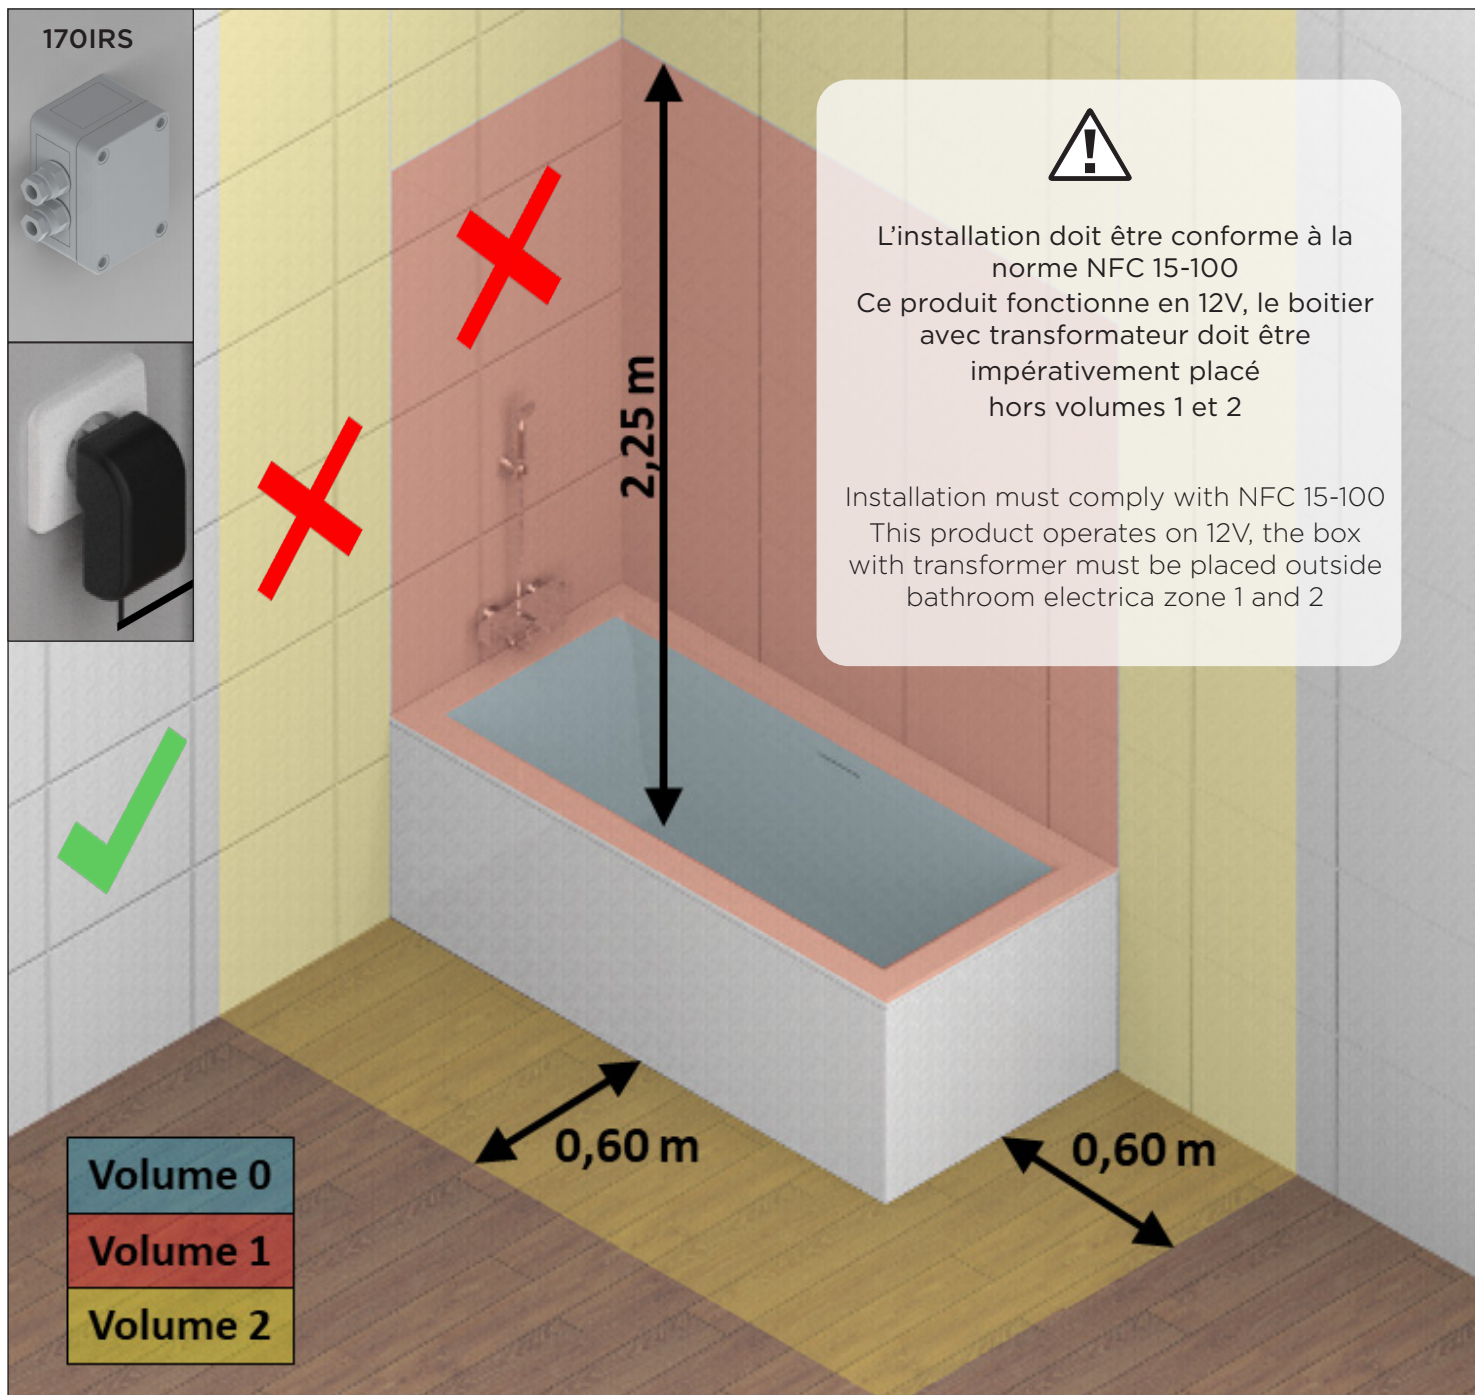

Anomalies de fonctionnement / Operating anomalies

Pas de detection
No detection

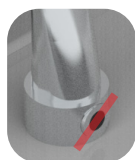


Verifier

Please check



Ou
Or

170IRS

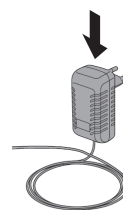

170IRB





Pas d'eau chaude ou froide
No hot or cold water



Verifier

Please check



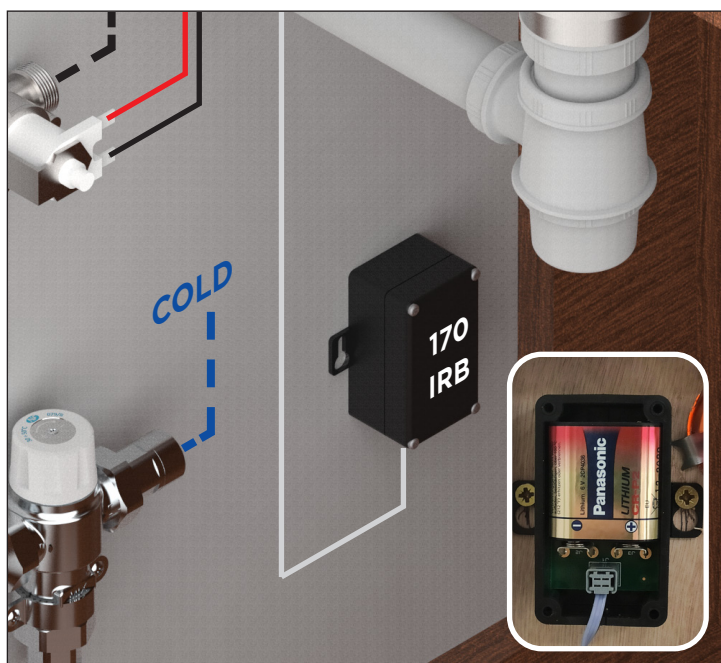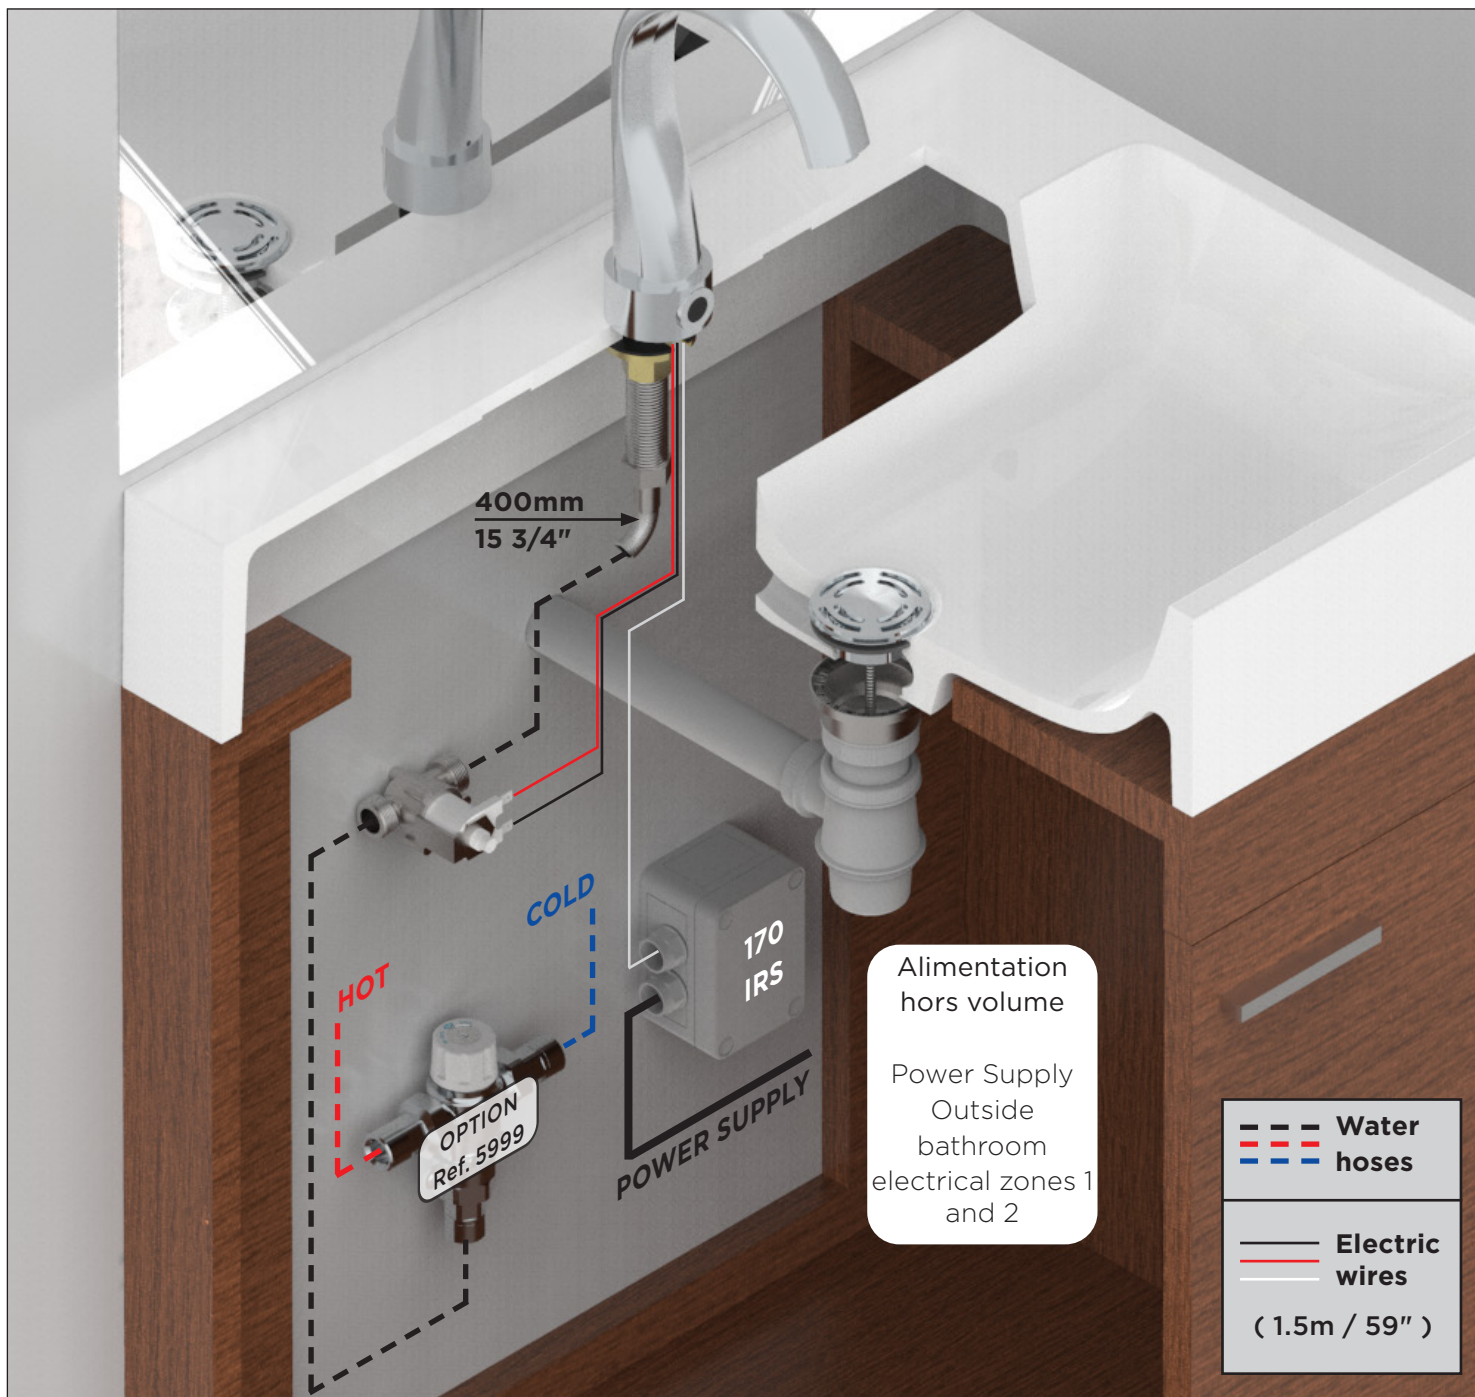

- 1 - Débrancher le connecteur du boîtier pendant minimum 3 secondes, rebrancher le connecteur du boîtier
- 2 - La cellule clignote, Présenter la main à 5 cms de la cellule, la cellule est fixe.
- 3 - Eloigner la main à la distance souhaitée (maxi 30 cms) jusqu'à ce que la cellule s'éteigne. Enlever la main
- 4 - La distance de détection est calibré

- 1 - Disconnect the connector from the box for at least 3 second, Reconnect the connector
- 2 - The light flashes, keep your hand 5 cms from the sensor, the light is fixed.
- 3 - Move your hand to the desired distance (maximum 30 cms) until the light turns off. Remove hand
- 4 - The detection distance is calibrated

